



AUTHORITY 22[®]

Crosswise Ratios

	Zone 1	Average	Ratio
3L-7L	Left =	37,8	2,1
3R-7R	Right=	37,8	2,1
18L-18R	Center =	80,0	

	Zone 2	Average	Ratio
3L-7L	Left =	24,6	2,6
3R-7R	Right=	24,6	2,6
18L-18R	Center=	65,0	

	Zone 3	Average	Ratio
3L-7L	Left =	19,2	2,6
3R-7R	Right=	19,2	2,6
18L-18R	Center=	50,0	

	Zone 4	Average	Ratio
3L-7L	Left =	15,2	2,6
3R-7R	Right=	15,2	2,6
18L-18R	Center =	40,0	

	Zone 5	Average	Ratio
3L-7L	Left =	10,6	3,3
3R-7R	Right=	10,6	3,3
18L-18R	Center=	35,0	

	Zone 6	Average	Ratio
3L-7L	Left =	1,0	1,0
3R-7R	Right=	1,0	1,0
18L-18R	Center=	1,0	

	Zone 7	Average	Ratio
3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right=	#DIV/0!	#DIV/0!
18L-18R	Center =	#DIV/0!	

	Zone 8	Average	Ratio
3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right=	#DIV/0!	#DIV/0!
18L-18R	Center=	#DIV/0!	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

